



## Quickstart

## Camera Controls

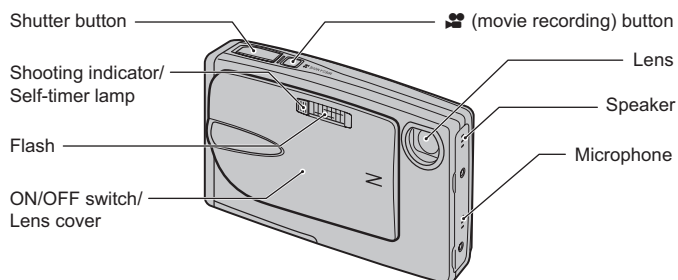

FinePix Z20fd has internal memory that can store images without Memory Card. Use a **Memory Card** (sold separately) when recording a large number of images.

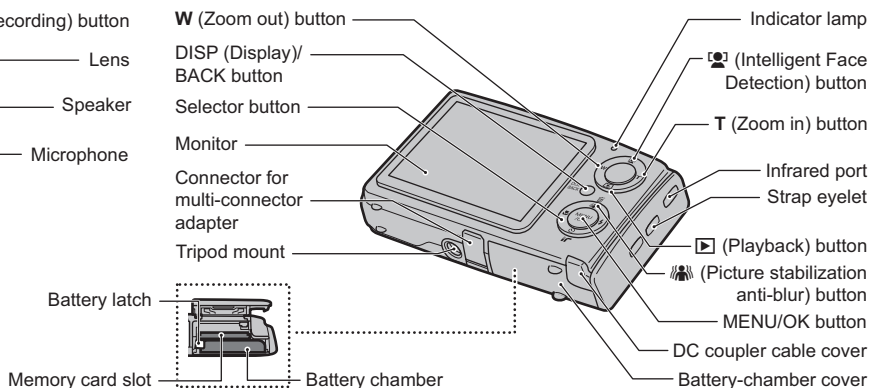


BL00709-100(1) E


## Picture Taking

## Refer to Owner's Manual for more detailed instructions

## A. Charging the Battery

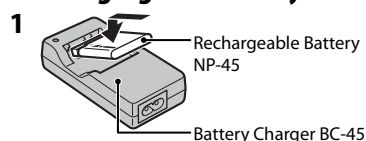


Insert the battery into the supplied BC-45 battery charger as shown, making sure that the battery is in the correct orientation.

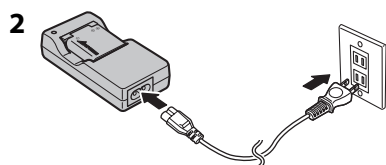


Connect the power cable and plug the charger into a power outlet. The red charging indicator will light. Charging is complete when the charging indicator turns off. A fully exhausted battery takes about 180 minutes to charge.

## B. Inserting the Battery

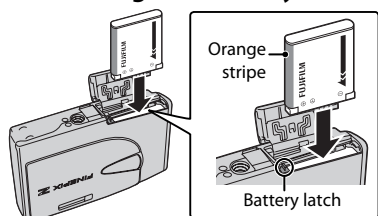

Align the orange stripe on the battery with the orange battery latch and slide the battery into the camera, keeping the battery latch pressed to the side. Confirm that the battery is securely latched.


## C. Setting up the Camera

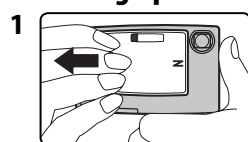


Open the lens cover completely to turn the camera on.



- ① A language-selection dialog is displayed the first time the camera is turned on.
- ② Press the selector up, down, left, or right to highlight a language.
- ③ Press **MENU/OK**.

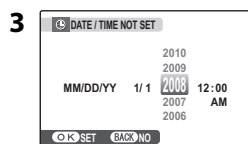


- ① Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down.
- ② Press **MENU/OK**.

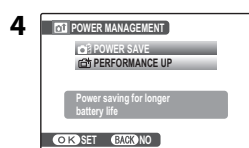


- ① Press the selector up or down to highlight one of the following options:
  - **POWER SAVE**: Save battery power.
  - **PERFORMANCE UP**: Intelligent Face Detection turns on and **LCD MODE** is set to **STANDARD** for improved display quality.
- ② Press **MENU/OK**.

## D. Taking Pictures

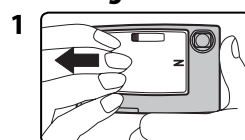

Open the lens cover completely to turn the camera on.

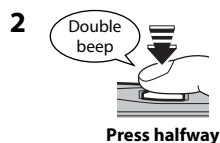

Press the shutter button down halfway to adjust the focus.



Smoothly press the shutter button the rest of the way down to take the picture.

## E. Viewing Pictures




Press the **(Playback)** button.




Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.

## How to insert a Memory Card.

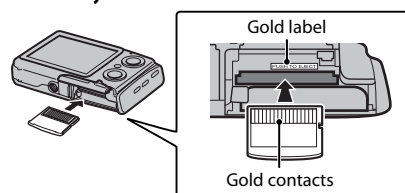

Align the gold marking with the gold contact area, then insert an **xD-Picture Card** or **SD Memory Card** completely.

## Using Intelligent Face Detection

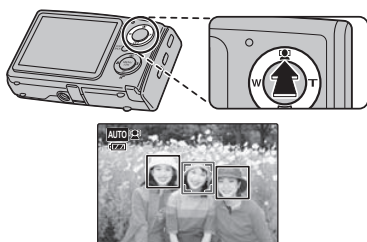

With Intelligent Face Detection, the subject's face(s) is detected and focused on automatically, so you can take a picture of people in most suitably lit conditions.


Intelligent Face Detection will even detect and focus on two faces on opposite sides of the frame, where ordinarily the background in the center of the frame would be focused. In addition, Intelligent Face Detection adjusts for the brightness of the faces.

Press  to zoom in on a face when playing back the image taken with Intelligent Face Detection.

## Viewing Images on your PC



### A. Installing Software

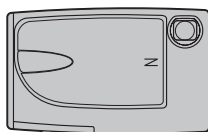

### B. Connecting the Camera to your PC


### C. Saving the Images



### A. Installing Software

Do not connect the camera to your PC until the software installation is completed.


#### 1 Turn on your PC and start up Windows.

-  Users of Windows 2000 Professional or Windows XP or Windows Vista should log in by using a system administrator account (e.g. "Administrator").

#### 2 Quit all other active applications until no applications are shown in the taskbar.

#### 3 Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically. For Windows Vista users: When loading the bundled CD-ROM on your PC, the "AutoPlay" window may appear. In this case, click "SETUP.exe". When "User Account Control" window appears, click "Allow".


#### 4 The Setup screen appears. Click the **Installing FinePixViewer** button.

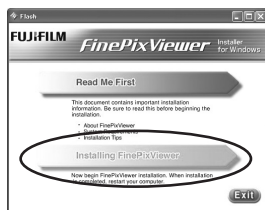

#### 5 After installation completed, press **Restart** button.

### B. Connecting the Camera to your PC

- 1 Insert the Memory Card with images into the camera.
- 2 Connect the camera to your PC using the USB cable (included).

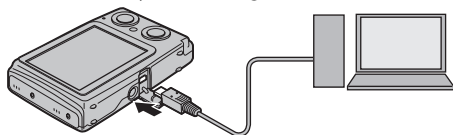

#### 3 Press for about 1 second to turn the camera on in Playback mode.


#### 4 **Windows 2000 Professional**

FinePixViewer starts up automatically.

#### **Windows XP/Vista**

The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

FinePixViewer starts up automatically.

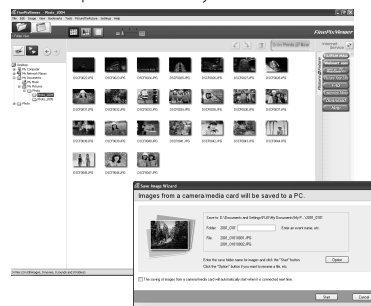


### C. Saving the Images

- 1 The Save Image Wizard starts up. Click the **Start** button.
- 2 Check that the files are downloaded from the camera to your PC and that a folder with the date is created.  
Ex. \My Documents \ My Pictures \ 2008\_0801

### D. Viewing the Images

#### 1 Click the **Show List of Images** button.

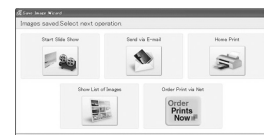

#### 2 Select "Preview" in the View menu to display an enlarged image.

### For more information

Refer to "How to use FinePixViewer" in the HELP menu, or "Software Installation" in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.  
([http://www.fujifilm.com/products/digital\\_cameras/index.html](http://www.fujifilm.com/products/digital_cameras/index.html))

For Macintosh users, refer to "Software Installation" in the Owner's Manual.